

Getting Started with Sentinel V

Step 1

Is the system Self-Contained or Real-Time?
Check for a SC or RT label next to the product label:



Self-Contained



Real-Time



Step 2

How do I communicate with the system?
For RT systems, check for a 232, 422 or Eth label next to the product label:
For SC systems, always connect using WLAN.



Ethernet



Serial
RS-232



Serial
RS-422

For RS-422, use a
RS-232 to RS-422 converter.

Step 3


Read the Deployment Guides
Included with the system are printed copies of both the SC and RT Deployment guides.



Step 4


Install the Software and Documentation
The Documentation and Software CD has all SC and RT software and PDF versions of all the Sentinel V SC and RT documentation.

- Use the activation code to register Velocity.
- A 30-day Free Trial code is included with all Sentinel V systems.
 - If Velocity is purchased with the system, a separate registration code is included.

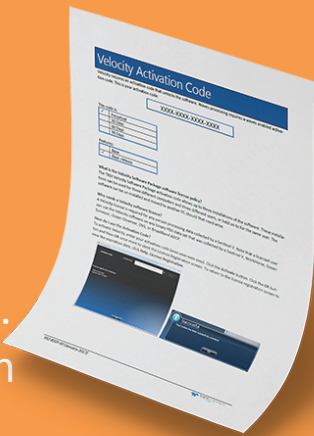

The Documentation & Software CD includes:

- Sentinel V Real-Time Utilities and Velocity
- Manual and Quick Start cards

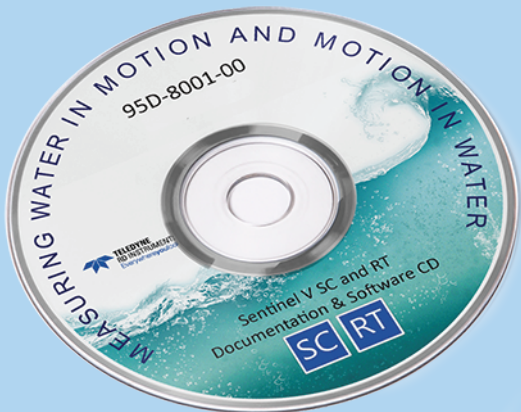

For easy reference, the Quick Start cards can be found in the Appendices of the Operation Manual.

